 
 


# Alcatel 5045 Pixi 4 User Guide

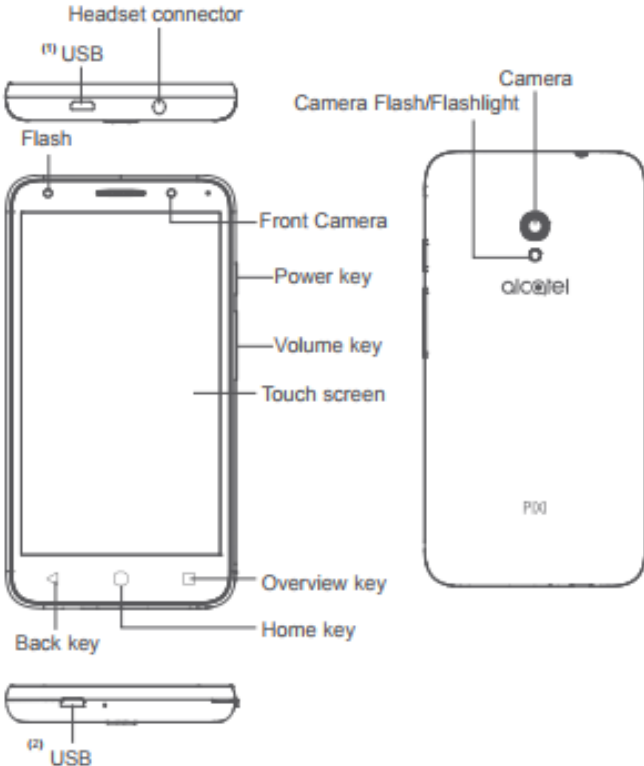

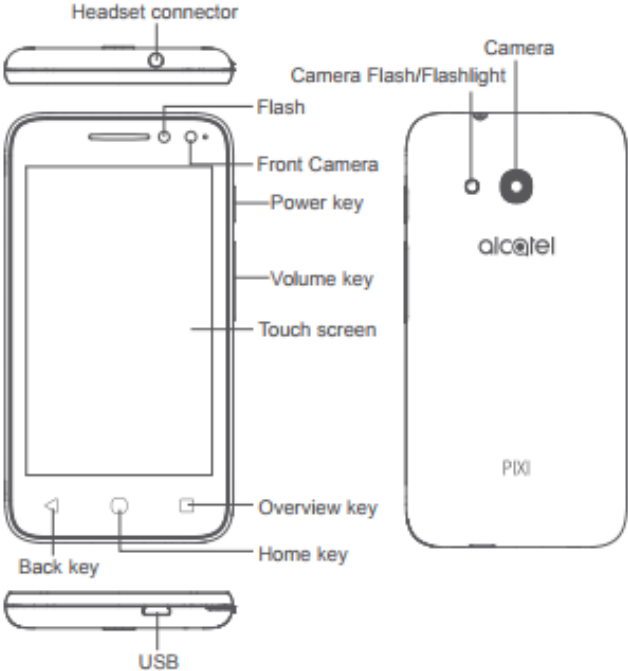

#### Overview key

- Touch to switch between individual app activities and documents.



#### Home key

- From any application or screen, touch to return to the Home screen.
- Long press to turn on Google Now.



#### Back key

- Touch to go back to the previous screen, or close a dialog box, options menu, the notification panel, etc.



#### Power key

- Press: Lock the screen/Light up the screen.
- Press and hold: Show the popup menu to select from **Restart**, **Power off**, and **Aeroplane mode**.
- Press and hold the **Power** key for at least 10 seconds to force reboot.
- Press and hold the **Power** key and **Volume up** key under power off mode to enter recovery mode.
- Press and hold the **Power** key and **Volume down** key to make a screenshot.

 


#### Volume Keys

- During a call, adjusts the earpiece or headset volume.
- In Music/Video/Streaming mode, adjusts the media volume.
- In general mode, adjusts the ringtone volume.
- Mutes the ringtone of an incoming call.

### Making a call

To make a call when the phone is on, go to the Home screen and touch the Phone icon in the Favourites tray.

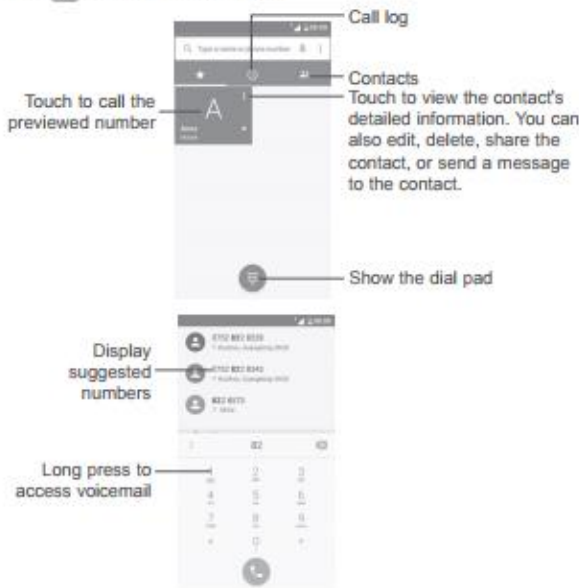

Enter the number you want from the dial pad or select a contact from **Call log** or **Contacts** by touching tabs, then touch to place the call.

The number you entered can be saved to **Contacts** by touching the **Create new contact** icon or the **Add to a contact** icon .

If you make a mistake, you can delete the incorrect digits by touching .

To hang up a call, touch .


#### International call

 To dial an international call, long press to enter "+", then enter the international country prefix followed by the full phone number and touch .

#### Emergency call

If your phone has network coverage, dial the emergency number and touch to make an emergency call. This works even without a SIM card and without typing the PIN code.

### 3.1.2 Answering or rejecting a call

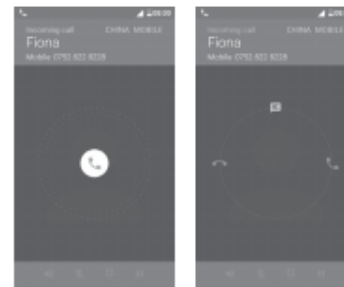

When you receive a call:

- Swipe the icon right to answer;
- Swipe the icon left to reject;
- Swipe the icon upwards to reject the call by sending a preset message.

### Sending a text message

Enter the name or mobile phone number of the recipient on the recipients bar or touch to add recipients, then touch the content bar to enter the text of the message. When finished, touch to send the text message.

An SMS message of more than 160 characters will be charged as several SMS. A counter above the sending icon will remind you of the number of remaining characters can be entered in one message.

Specific letters (like accents, for example) will also increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

### Sending a multimedia message

MMS enables you to send video clips, images, photos, contacts, slides and sounds to other compatible mobiles and email addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or subject or email addresses are added.

To send a multimedia message, enter the recipient's phone number or name in the recipients bar, touch content bar to enter the text of the message.

Touch to open the options menu, then touch **Add subject** to insert a subject.

Touch to attach a picture, video, audio, etc.

When finished, touch to send the multimedia message.