

Kyocera DuraMax E4255 User Guide

Your Phone at a Glance

Your phone's layout is designed to be functional and easy to use.



Key Functions

- **Earpiece** lets you hear the caller and automated prompts.
- **Main Screen** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
- **Softkeys** let you select softkey actions or menu items corresponding to the bottom left and right lines on the main screen while the phone is open.
- **Navigation Key** lets you scroll through the phone's menu options.
- **MENU/OK Key** lets you access the phone's menus and selects the highlighted choice when navigating through a menu.
- **Camera Key** lets you activate the camera or video mode and take pictures and videos with the phone open.
- **TALK Key** allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Automatic Speech Recognition (ASR).
- **SPEAKER Key** lets you place or receive calls in speakerphone mode or turn the speakerphone on and off during a call.
- **Microphone** allows other callers to hear you clearly when you are speaking to them.
- **BACK Key** deletes characters from the display in text input mode. When in a menu, pressing it returns you to the previous menu. This key also allows you to return to the previous screen in a data session.
- **END/POWER Key** lets you turn the phone on or off, end a call, or cancel your input and return to standby mode.
- **Keypad** lets you enter numbers, letters, and characters, and perform functions.
- **Internal Antenna** facilitates reception and transmission. To maximize performance, do not touch the bottom portion of your phone where the internal antenna is located while using the phone.
- **Call List Button** lets you display the recent call history or end a call.
- **External Speaker Button** lets you place or receive calls in speakerphone mode, turn the speakerphone on and off during a call, activate Automatic Speech Recognition (ASR), or unlock the keyguard.
- **Volume Button** allows you to adjust the ringer volume in standby mode or the voice volume during a call.
- **Speaker** lets you hear the different ringers and sounds. The speaker also lets you hear the caller's voice in speakerphone mode.

Make Phone Calls

There are several convenient ways to place calls from your phone.

Call Using the Phone Keypad

The most "traditional" way to place a call is by using the phone's keypad.

1. Enter a phone number from standby mode. (If you make a mistake while dialing, press **END** to erase the numbers.)
2. Press **CALL**, **SEND**, or the external speaker button.
3. Press **END** when you are finished.

Text Messaging and Multimedia Messaging

Compose Messages

You can easily compose and send a text or multimedia message from your phone.

1. Press **MESSAGING** > **Messaging**.

Shortcut: Press **MESSAGING** (left softkey) in standby mode.

2. Press **Send Message**.

3. Select a recipient from the list or from the following options:

- **Go to Contacts** to select a recipient from your Contacts. (Qualifying Contacts entries must contain a phone number or an email address.)
- **MULTIPLE** (left softkey) to select multiple recipients. Press **CONTINUE** (left softkey) when you have finished selecting and entering recipients. (You may include up to 40 recipients per message.)
- **NEW ADDRESS** (right softkey) to enter a recipient's phone number or email address directly. Press **CONTINUE** (left softkey) to proceed.

4. Compose a message.

- Press **OPTIONS** (right softkey) to select additional options.

5. Select **<Add Attachment>** and select a category of files you would like to attach (**Picture**, **Video**, **Voice**, **Audio**, or **File Manager**).
6. Select a location where your file is stored. (You can also choose to take a new picture or video, or to record a new voice or audio clip.)
7. Select files you would like to attach.
8. Review your message and press **SEND** (left softkey).

If you are needing additional assistance with your device please give us a call at 1.855.204.3667.