

# Kyocera DuraXT E4277 User Guide

## Your Phone at a Glance

The following illustration outlines your phone's primary external features.



## Key Functions

- **Earpiece** lets you hear the caller and automated prompts.
- **Main Screen** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
- **Softkeys** let you select softkey actions or menu items corresponding to the bottom left and right lines on the main screen while the phone is open.
- **Navigation Key** lets you scroll through the phone's menu options.
- **MENU/OK Key** lets you access the phone's menus and selects the highlighted choice when navigating through a menu.
- **Camera Key** lets you activate the camera or video mode and take pictures and videos with the phone open.
- **TALK Key** allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Automatic Speech Recognition (ASR).
- **SPEAKER Key** lets you place or receive calls in speakerphone mode or turn the speakerphone on and off during a call.
- **Microphone** allows other callers to hear you clearly when you are speaking to them.
- **BACK Key** deletes characters from the display in text input mode. When in a menu, pressing it returns you to the previous menu. This key also allows you to return to the previous screen in a data session.
- **END/POWER Key** lets you turn the phone on or off, end a call, or cancel your input and return to standby mode.
- **Keypad** lets you enter numbers, letters, and characters, and perform functions.
- **Internal Antenna** facilitates reception and transmission. To maximize performance, do not touch the bottom portion of your phone where the internal antenna is located while using the phone.
- **Call List Button** lets you display the recent call history or end a call.
- **External Speaker Button** lets you place or receive calls in speakerphone mode, turn the speakerphone on and off during a call, activate Automatic Speech Recognition (ASR), or unlock the keyguard.
- **Volume Button** allows you to adjust the ringer volume in standby mode or the voice volume during a call.
- **Speaker** lets you hear the different ringers and sounds. The speaker also lets you hear the caller's voice in speakerphone mode.
- **Direct Connect Button (DC Button)** allows you to make Direct Connect calls, send Call Alerts, and view Direct Connect call history. See [Sprint Direct Connect](#).
- **Outer Screen** displays the information such as the call status, the date and time, and the signal and battery strength.
- **Charger/Accessory Jack** allows you to connect a compatible charging cable or USB data cable (not included).

## Call Using the Phone Keypad

The most "traditional" way to place a call is by using the phone's keypad.

1. Enter a phone number from standby mode. (If you make a mistake while dialing, press **BACK** to erase the numbers.)
2. Press **TALK**, **PHONE**, or the external speaker button.
3. Press **END** when you are finished.

## Text Messaging and Multimedia Messaging

### Compose Messages

Use your phone to send text messages.

1. Press **MMS** > **Messaging**.  
**Shortcut:** Press **MESSAGING** (left softkey) in standby mode.
2. Select **Send Message**.
3. Select a recipient from the list or from the following options:
  - **Go to Contacts** to select a recipient from your Contacts. (Qualifying Contacts entries must contain a phone number or an email address.)
  - **MULTIPLE** (left softkey) to select multiple recipients. Press **CONTINUE** (left softkey) when you have finished selecting and entering recipients. (You may include up to 40 recipients per message.)
  - **NEW ADDRESS** (right softkey) to enter a recipient's phone number or email address directly. Press **CONTINUE** (left softkey) to proceed.
4. Compose a message.
  - Press **OPTIONS** (right softkey) to select additional options.
5. Select **<Add Attachment>** and select a category of files you would like to attach (**Picture**, **Video**, **Voice**, **Audio**, or **File Manager**).
6. Select a location where your file is stored. (You can also choose to take a new picture or video, or to record a new message or audio clip.)
7. Select files you would like to attach.
8. Review your message and press **SEND** (left softkey).

If you are needing additional assistance with your device please give us a call at 1.855.204.3667.