

Kyocera S2151 Kona User Guide

Your Phone's Layout

The illustrations and descriptions below outline your phone's basic layout.



Key Functions

- **Earpiece** lets you hear the caller and automated prompts.
- **Main Screen** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
- **OK Key** (OK) lets you access the phone's menus and select the highlighted choice when navigating through a menu.
- **Camera Key** (CAM) lets you access the Photos menu. Press and hold to activate the camera mode and take pictures.
- **Talk Key** (CALL) allows you to place or receive calls, answer Call Waiting or activate Automatic Speech Recognition (ASR).
- **Speaker Key** (SPEAKER) lets you place or receive calls in speakerphone mode, turn the speakerphone on and off during a call, or activate Automatic Speech Recognition (ASR).
- **Emergency Contacts Key** (ICE) lets you access your In Case of Emergency (ICE) contacts. See [ICE Contacts](#).
- **Microphone** allows other callers to hear you clearly when you are speaking to them.
- **Softkeys** (LEFT/RIGHT) let you select softkey actions or menu items corresponding to the bottom left and right lines on the screen.
- **Navigation Key** scrolls through the phone's menu options and acts as a shortcut key in standby mode. These keys can be reassigned to create customized shortcuts. See [Navigation Key Shortcuts](#).
- **Back Key** (BACK) deletes characters from the display in text input mode. When in a menu, pressing it returns you to the previous menu. This key also allows you to return to the previous screen in a data session.
- **End/Power Key** (POWER) lets you turn the phone on or off, end a call, or cancel your input and return to standby mode.
- **Keypad** lets you enter numbers, letters, and characters, and perform functions.
- **Emergency Call Key** (911) lets you call 911 immediately.
- **LED Indicator** shows your phone's status at a glance.
- **Volume Button** allows you to adjust the ringtone volume in standby mode or the voice volume during a call.
- **Outer Screen** lets you monitor the phone's status and see who is calling without opening the phone.
- **Charger/Accessory Jack** allows you to connect a compatible charging cable or USB data cable (not included).
- **Camera Lens**, as part of the built-in camera, lets you take pictures.
- **Speaker** lets you hear the different ringtones and sounds. The speaker also lets you hear the caller's voice in speakerphone mode.
- **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations.
- **Internal Antennas** facilitate reception and transmission. To maximize performance, do not obstruct while using the phone.
- **Battery Cover Slot** lets you open the battery cover to replace the battery.

CAUTION! Inserting an accessory into the incorrect jack may damage the phone.

Turn Your Phone On and Off

The instructions below explain how to turn your phone on and off.

Turn Your Phone On

 


- ▶ Open the phone and press .

Turn Your Phone Off

- ▶ Open the phone and press and hold  for two seconds until you see the powering-down animation on the main screen.

Call From Call History

Place a call to the numbers in your Call History.


1. Press  > **Call History**.
– or –
Press  in standby mode.
2. Highlight an entry and press .

Tip: To redial your last outgoing call, press  twice.


Note: You cannot make calls from Call History to entries identified as **No Caller ID**, **Private (Restricted ID)**, or **Unavailable ID**.

Call From Contacts

Place a call to the numbers stored in your Contacts.

1. From standby mode, press **CONTACTS** (right softkey).
2. Highlight the entry you want to call.
3. Press  to dial the entry's default phone number.

– or –

To dial another number from the same entry, press  to select the entry, highlight a number, and then press .

Receive Phone Calls

You can select the most convenient way to respond to a call.

Your phone notifies you of incoming calls in the following ways:


- The phone rings or vibrates.
- The LED indicator flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number may also be displayed, if available.

Note: If your phone is turned off, all calls automatically go to voicemail.

Note: Your phone will answer an incoming call by opening the phone by default. To change the setting, see [Call Answer Mode](#).

Answer an Incoming Call

- ▶ Press  to answer an incoming call. (Depending on your settings, you may also answer incoming calls by pressing other keys. See [Call Answer Mode](#).)

If you are needing additional assistance with your device please give us a call at 1.855.204.3667.