


Samsung Intercept M910 User Guide

Your Device

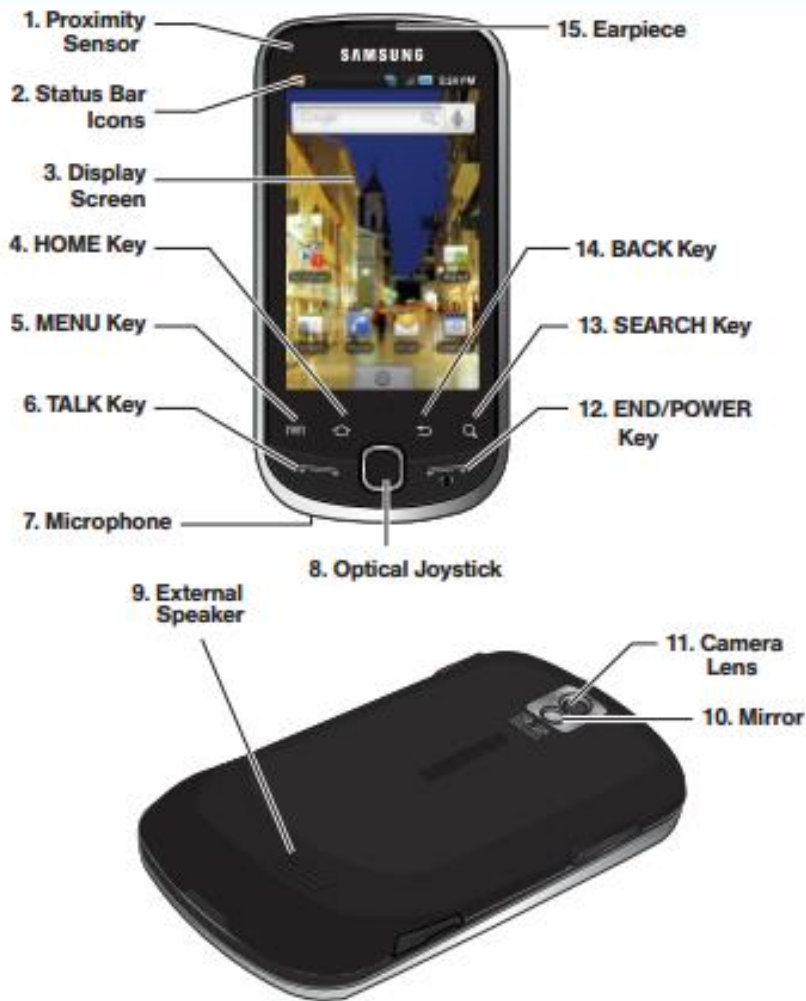


 





Key Functions





1. **Proximity Sensor** detects how close an object is to the surface of the LCD. This is typically used to detect when your face is pressed up against the LCD, such as during a phone call.
2. **Status Bar Icons** provide information about your device's status and options, such as signal strength, roaming, ringer setting, messaging, signal strength, and battery charge.
3. **Display Screen** displays all the information needed to operate your device, such as the call status, the Contacts list, and the date and time.
4. **HOME Key** returns you to the Home screen. Press and hold to open the recently-used applications window.
5. **MENU Key** allows you to access your device's main functions menu: Add, Wallpaper, Search, Notifications, and Settings. While in a menu, touch to open a list of actions available from the current screen or onscreen option.
 - During an active call, press to open additional call options such as: Contacts or Send msg.
6. **TALK Key** allows you to place or receive calls, answer Call Waiting, use 3-Way Calling, or activate Voice Dial.
 - While a Contacts entry or phone number is highlighted, tap to call that contact or phone number.
7. **Microphone** allows other callers to hear you clearly when you are speaking to them.
8. **Optical Joystick** lets you highlight and select (tap) onscreen items.
9. **External Speaker** lets you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing the volume button. The speaker also lets you hear the caller's voice in speakerphone mode.
10. **Mirror**, as part of the built-in camera, lets you see yourself when taking a self-portrait picture.
11. **Camera Lens**, as part of the built-in camera, this 3.2 megapixel camera lets you take pictures and videos.
12. **END/POWER Key** lets you turn the device on or off, end a call, or turn off the LCD.
 - When the screen is turned off, press once to return to Screen lock mode.
 - While the device is unlocked and not on an active call, press and hold to display the Phone options menu (Silent mode, Airplane mode, Power off).
13. **SEARCH Key** displays the Quick Search box that can be used to search for a key term both on the phone or online. It's the ultimate search field (page 23).
 - For example, entering the word "Pa", will display any matching entries from your device's Contacts list, current device applications, online Android/Google apps, or from any online Web page via Google search.
 - Press and hold to launch **Voice Search** where you can initiate a Google™ search by verbally entering a text string. The device recognizes your spoken words and initiates a Web search.

14. **BACK Key** deletes characters from the display in text entry mode. When in a menu, pressing the Back key returns you to the previous menu, closes a dialog box, or exits an onscreen menu/option.
15. **Earpiece** lets you hear the caller and automated prompts.
16. **Light sensors** let you use the ambient light level to adjust the screen brightness/contrast.
 - In a bright light condition (outdoors), the sensors cause the device to increase the brightness and contrast for better viewing.
 - In a dim light condition (while talking on the phone) the sensors detect talk activity and lock the keypad to prevent accidental key presses.
17. **Volume Button** allows you to adjust the ringer volume in standby mode, the voice volume during a call, and media playback volume.
18. **Camera Button** lets you activate the camera and camcorder and take pictures and videos.
19. **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations. **CAUTION!** Inserting an accessory into the incorrect jack may damage the device.





Making Calls

1. Press  and then tap .
– or –
Press  and touch **Keypad** .
2. Enter a phone number using the onscreen dialpad and tap .
3. Press  or tap  when finished.

Composing Text Messages

1. Press  and tap  > .
2. Press  and tap **Compose**.

Note: From the Messages screen, you can also touch **New message** to begin creating a new outgoing message.

3. Tap the **To:** field and enter the recipient's phone number or email information using either the onscreen or QWERTY keyboards.
 - **Contacts** as you enter either a phone number or email address, if the information matches a current contact's entry information, you will see a match. When you see a match, touch the associated name to complete the addressing.
 - **Mobile** to use the keypad to enter a wireless phone number directly.
 - **Email** to enter the recipient's email address.
 - or –
Touch and hold the **To:** field to reveal the **Input method** context menu. choose from one of two available methods:
 - **Android keyboard** to continue using the onscreen keyboard.
4. Tap a matching entry from the onscreen drop-down list. This list is populated by matches found from your managed accounts.
5. Touch the **Type to compose** field and enter your message.
6. Insert an Emoticon or a Smiley.
 - To enter an emoticon, touch and hold  from the onscreen keyboard.
 - To enter a smiley from the onscreen keyboard, press  and tap **Insert smiley** or press  and  from the QWERTY keyboard.
 - Make a selection from the onscreen list to then insert it into your current message.
7. Review your message and tap **Send**.

If you are needing additional assistance with your device please give us a call at 1.855.204.3667.