

Samsung M400 User Guide

Your Phone's Layout

The illustrations and descriptions below outline your phone's basic layout.



Key Functions

- **Display** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the greeting.
- **Navigation Key** allows you to scroll through the phone's menu options and acts as a shortcut key from standby mode.
- **Option Key (left)** lets you select softkey actions or menu items corresponding to the bottom left line on the Display Screen.
- **Emergency Contacts** accesses your ICE (In Case of Emergency) contacts.
- **Talk Key** allows you to place or receive calls, answer Call Waiting, use 3-Way Calling, or activate Voice Dial.
- **Voicemail Key** lets you access your voicemail by pressing and holding this button.
- **Mic** allows other callers to hear you clearly when you are speaking to them.
- **Back Key** deletes characters and numbers from the display in text entry mode. When in a menu, pressing the Back key returns you to the previous menu. This key also allows you to return to the previous screen in a data session.
- **End/Power Key** lets you turn the phone on or off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to mute the ringer or ignore the call.
- **Speaker Key** to route the phone's audio through the speaker or through the earpiece.
- **Option Key (right)** lets you select softkey actions or menu items corresponding to the bottom right line on the Display Screen.
- **MENU/OK** lets you access the phone's menus and selects the highlighted choice when navigating through a menu.
- **Emergency Call Key** lets you immediately dial 911 for emergencies.
- **Earpiece** lets you hear the caller and automated prompts.
- **Camera Button** contains the hardware enabling you to capture pictures.
- **Charger/Accessory Jack** allows you to connect the phone charger or an optional USB cable.
- **Voice Recognition Button** allows you to activate the Nuance Voice Recognition feature.
- **Volume Buttons** allows you to adjust the ringer volume in standby mode (with the phone open) or adjust the voice volume during a call.
- **Speaker** to route the phone's audio through the speaker.
- **3.5mm Headset Jack** allows you to connect the phone charger or an optional USB cable (included).
- **Camera lens** lets you capture pictures.

Call Using the Keypad

Making calls is as easy as entering a phone number and pressing the **Talk** key.

1. Enter a phone number from standby mode. (If you make a mistake while dialing, press **BACK** to erase the numbers.)
2. Press **TALK**. (To make a call when you are roaming and Call Guard is enabled, highlight **Roam Call** and press **TALK**.)
3. Press **END** when you are finished.

Tip: To redial your last outgoing call, press **TALK** twice. To redial other recent numbers, press **TALK**, highlight a number, and press **TALK** again.

Text Messaging and MMS

With Text Messaging (SMS), you can send and receive instant text messages between your wireless phone and another messaging-ready phone.

Multimedia messages, or MMS, can contain text, pictures, and voice recordings.

Compose Text Messages

Quickly compose and send text messages on your phone.

- ▶ Press **OK** > Messages > Send Message.

Select a Single Recipient

- ▶ Highlight a contact from the **Go to Contacts** list and press **OK**.

Select Multiple Recipients

1. Press **MULTIPLE** (left softkey) to select multiple contacts.
2. Highlight an entry and press **OK**. Repeat the process for each entry in the list.
3. Press **CONTINUE** (left softkey).

Compose a Message

- ▶ From a screen where you can enter text, press **OPTIONS** (right softkey) > **Text Mode** to change the text input mode.

If you are needing additional assistance with your device please give us a call at 1.855.204.3667.