



# Samsung Mantra M340 User Guide



## Saving a Phone Number

The Contacts list can store a maximum of 500 contacts in total, with each contact entry containing a maximum of 5 phone numbers. Each entry's name can contain up to 20 characters. Your phone automatically sorts these Contact entries in alphabetical order.

### Storing a number from the Main screen

1. From the Main screen, after entering the phone number, select **Save** (Left Option Button).
2. Select New entry or Existing entry and press .
3. Select a label (Mobile, Home, Work, Pager, or Others) and press .
5. Press the Down Navigation key and enter a phone number in one of the categories.
6. Select **Done** (Left Option Button) to store the new entry.

### Storing a Number After a Call



1. After the call ends, select **Save** (Left Option Button).
2. Repeat the procedures from the previous section

### Adding a New Entry



1. Select **Menu** (Left Option Button) → **Contacts** → **Add new**.
2. Enter a name for the entry using the numeric keys.
3. Use the keypad to enter a name for the contact. For more information, refer to "Entering Text" on page 21. You can choose to enter additional information for this contact into the remaining fields, such as an Email, IM, URL, Group, Assign Ringtone, Assign Text tones, and Add Photo.
4. Select **Done** (Left Option Button) once you are done making changes and you are ready to store the new entry.

## Making and Answering Calls

### Making Calls

1. Enter a phone number and press . To end the call, press .

---


**Note:** To modify the phone number you entered, press  to erase one digit at a time. To erase the entire number, press and hold .

---



**Note:** If "CALL FAILED" displays on the screen or the line is busy, press , , or redial the number. If you activate the "AUTO RETRY" function, the phone automatically redials the number of times specified. If "Enter lock code" displays on the screen, enter your 4-digit password to unlock your phone.

---

### Answering Calls

1. When your phone rings or vibrates, press  to answer the incoming call. (Depending on your phone's settings, you may also answer incoming calls by pressing any number key.)

### Creating a Text Message


1. Select **Menu** → **Messaging** → **Send text message**.
2. Use the keypad to enter a recipient's phone number or email address.  
– or –  
Use the navigation key to select the Contacts list field and press . Then place checkmarks adjacent to those current Contacts entries you want to send the outgoing message to and press **Next** (Left Option Button).
2. To end the current call, press .

---

**Note:** To ignore incoming calls, press **Ignore** (Right Option Button).

---

If the incoming call is from a number stored in your Contacts, the associated name displays. If the incoming caller was not stored in your Contacts list, only the phone number displays. For all incoming calls, the following options are available. To select an option, press the corresponding option button.

- **Answer:** to answer the incoming call. (This is the same as pressing )
  - **Ignore:** to send the call to your voicemail box.
3. Once you've chosen your recipients, select **Next** (Left Option Button).
  4. Enter the text for the message. As you begin to enter a character, you are taken to a text entry screen.
  5. Select **Done** (Left Option Button) when you are finished entering text.
  6. Select **Send** (Left Option Button) to start the delivery process.
  7. The phone processes and when the message is sent, "Message Sent" displays.

If you are needing additional assistance with your device please give us a call at 1.855.204.3667.