

Samsung Rant M540 User Guide

Your Phone



Key Functions

1. **Earpiece** lets you hear the caller and automated prompts.
2. **Signal Strength Indicator** represents the signal strength by displaying bars. The more bars displayed, the better the signal strength.
3. **Display Screen** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
4. **Navigation Key** scrolls through the phone's menu options.
5. **Softkey (left)** lets you select softkey actions or menu items corresponding to the bottom left line on the display screen while the phone is in portrait mode.
6. **Speaker Key** lets you enable/disable the speakerphone mode.
7. **TALK Key** (📞) allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Voice Dial.
8. **Keypad** lets you enter numbers, letters, and characters, and navigate within menus. Press and hold number keys for speed dialing.
9. **Microphone** allows other callers to hear you clearly when you are speaking to them.
10. **END/POWER Key** (🔴) lets you turn the phone on or off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to enter silent mode and mute the ringer.
11. **BACK/Clear Key** deletes characters from the display in text entry mode. When in a menu, pressing (BACK) returns you to the previous menu. This key also allows you to return to the previous screen in a data session.
12. **Softkey (right)** lets you select softkey actions or menu items corresponding to the bottom right line on the display screen while the phone is in Portrait Mode.
13. **MENU/OK** lets you access the phone's menus and selects the highlighted choice when navigating through a menu.
14. **Battery Strength Indicator** represents the amount of remaining battery charge currently available in your phone. When all bars are displayed in the battery icon, the phone's battery is fully charged. When no bars are displayed, the phone's battery is completely discharged or empty.
15. **Softkey (left) Landscape Mode** lets you select softkey actions or menu items corresponding to the bottom left line on the display screen while the phone is in landscape mode.
16. **Headset Jack** allows you to plug in either a stereo headset (sold separately) or an optional headset for convenient, hands-free conversations. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
17. **Volume Button** allows you to adjust the ringer volume in standby mode or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options.
18. **Softkey (right) Landscape Mode** lets you select softkey actions or menu items corresponding to the bottom right line on the display screen while the phone is in landscape mode.
19. **microSD Card (internal)** lets you use the included microSD card to expand the memory of your phone. To gain access to this slot, you must first remove the battery cover. (See "Installing the Battery" on page 18.)
20. **Cover Release Latch** lets you remove the battery cover and expose both the internal battery compartment and internal microSD card slot.
21. **Camera Lens**, as part of the built-in camera, lets you take pictures and videos.
22. **Charger/Accessories Jack** allows you to connect a compatible charging cable or USB data cable (both included). **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
23. **Camera Button** lets you activate the camera and video mode and take pictures and videos.

Making Calls

Placing a call from your wireless phone is as easy as making a call from any landline phone. Enter the number, press (📞), and you're on your way to clear calls.

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press (BACK) to erase the numbers.)
3. Press (📞). (To make a call when you are roaming and Call Guard is enabled, press (1 ES) and then press (📞). See "Using Call Guard" on page 76.)
4. Press (📞) when you are finished.

Send a Text Message

Use automatic speech recognition to launch text messaging on your phone and specify a recipient for the message.

1. Press and hold (📞).
2. Say "Send Text" followed immediately by the name of a person in your Contacts list and, optionally, the type of number (*Mobile1, Home1*, etc.) you want to send it to. For example, say "Send Text John Smith Mobile1."

If you do not specify the number type and there are multiple numbers for the name, your phone chooses the mobile number by default.

If you say "Send" without specifying a recipient, your phone prompts you with "Say the name." Say the name of a person in your Contacts list and, optionally, the type of number.

Note When you start a text message through voice activation, the message opens in Voice Mode automatically.

3. Use either the keypad or keyboard to enter text and press **Next** (left softkey).
4. Press **Send** (left softkey) to complete the process.

If you are needing additional assistance with your device please give us a call at 1.855.204.3667.