






Alcatel 4060 Ideal User Guide

Getting to know your phone



Key functions



Key	Function
Recent apps key 	Tap to see recently used applications.
Home key 	From any application or screen, touch to return to the Home screen. Touch and hold to pop up Google search icon. Slide your finger to the icon to open Google search.
Back key 	Touch to go back to the previous screen, or to close a dialog box, options menu, the notification panel, etc.
Power key 	Press and hold to turn phone on/off, restart the phone, or to set to Airplane mode. Press to switch your phone to Sleep Mode. Press to wake up your phone. Press and hold the Power key and Volume down key to capture a screenshot. Press and hold the power key for 8 seconds to power off or hold it for 10 seconds or more to force reboot.
Volume Keys 	Press the Volume Key to increase or decrease the volume. Press the Volume key to take photo. Press the Volume key to adjust the ringtone volume or mute the ringtone of an incoming call. Press Volume key to adjust the media volume in Music/Video/Streaming mode.

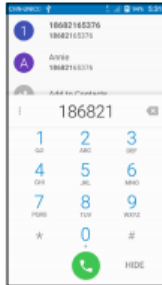 
Phone calls


Making calls

There are many ways to make a call with your phone, and they're all easy to do.


Calling from the dialer

1. From the home screen, tap .
2. Tap  to open the dialer.





 
3. Enter the phone number with the on-screen keypad. Tap  to delete incorrect digits.

Note: As you enter digits, your phone searches for contacts that match. If you see the number you want to dial, touch it to place the call immediately without entering the rest of the number.


 
4. Tap  to place the call.

Tip: To make an international call, press and hold the 0 key to enter the plus (+) symbol. Next, enter the country code, followed by the city/area code, and then the phone number.

Dial a Recent Number


1. From the home screen, tap  > .
2. Flick the screen up or down and tap the contact you want to call.
Tip: You can search for a contact by tapping the search field above the contacts list.
3. Tap the icon before the number then tap  to call, or tap the number to call.

Calling from your contacts

1. From the home screen, tap .
 2. Swipe your finger up or down to scroll through the contacts list, tap the contact you want to call, then tap .
- Tip:** You can search for a contact by tapping the search field above the Contact lists.


Receiving calls


Answering a call

When you receive a phone call, swipe  right to answer the call.

Note: To silence the ringer before answering the call, press either end of the Volume key.


Rejecting a call

When you receive a phone call, swipe  left to reject the call.

You can also swipe  up to reject the call and select a preset text message or write your own to send to the caller.



 
Tip: To edit a preset text response, tap  >  > **Settings** > **Quick responses**.

 
Connecting to the Internet

Your phone's impressive networking capabilities allow you to access the Internet or your corporate network with ease. You can use default connection settings to connect to the Web via your mobile network or Wi-Fi. The mobile data connection can be enable/disable manually. From the home screen, tap  > **Settings** > **More** > **Mobile networks** and check or uncheck **Mobile data**.

Adding a new mobile data connection


To connect to the Internet you can use the default Access Point Names (APN). If you want to add a new APN, please contact your service provider to get the necessary information.

1. From the home screen, tap  > **Settings** > **More** > **Mobile networks** > **Access Point Names** > .
2. Tap each item to enter the information you received from your service provider.
3. Tap  > **Save**.


Tip: To set the APN to default settings, tap  > **Reset to default**.

Turning on Wi-Fi

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

1. From the home screen, tap  > **Settings** > **Wi-Fi**.
2. Slide the Wi-Fi switch to the  position to turn on Wi-Fi.

Connecting to a Wi-Fi network



 
1. From the home screen, tap  > **Settings** > **Wi-Fi**. The Wi-Fi access points, or "hotspots," that your phone has detected are displayed with their names and security settings.
2. Tap an access point to connect to it. If security features are implemented, you'll need to enter a password.

Note: Your phone automatically connects to previously used Wi-Fi networks when they are in range.

Adding a Wi-Fi network

You can add a Wi-Fi network if the network does not broadcast its name (SSID), or to add a Wi-Fi network when you are out of range.

To connect to a secured network, you first need to get the security details from the network's administrator.

1. From the home screen, tap  > **Settings** > **Wi-Fi**.
2. Slide the Wi-Fi switch to the  position.
3. Tap  > **Add network**.
4. Enter the network SSID (name). If necessary, enter security or other network configuration details.
5. Tap **SAVE**.