

 


 



Kyocera DuraXTP E4281 User Guide

Phone Layout

The following illustration outlines your phone's primary external features and keys.

 




Part	Description
Smart Sonic Receiver (internal)	Lets you hear the caller and automated prompts. Place your ear around the internal receiver and adjust the position of the phone to find the best hearing point depending on the surrounding environment.
Main Screen	Displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
Softkeys	Let you select softkey actions or menu items corresponding to the bottom left and right lines on the main screen while the phone is open.
Volume Button	Allows you to adjust the ringtone volume in standby mode or the voice volume during a call.
MENU/OK Key 	Lets you access the phone's menus and selects the highlighted choice when navigating through a menu.
CAMERA Key 	Lets you activate the camera or video mode and take pictures and videos with the phone open.
TALK Key 	Allows you to place or receive calls, answer Call Waiting, use 3-Way Calling, or activate Automatic Speech Recognition (ASR).
SPEAKER Key 	Lets you place or receive calls in speakerphone mode, turn the speakerphone on and off during a call or activate Automatic Speech Recognition (ASR).
Emergency Contacts Key 	Lets you access your In Case of Emergency (ICE) contacts. See ICE (In Case of Emergency) Contacts .
Primary Microphone	Transmits your voice and ambient sound during voice calls, voice recordings and videos
Navigation Key	Lets you scroll through the phone's menu options.
BACK Key 	Deletes characters from the display in text input mode. When in a menu, pressing it returns you to the previous menu. This key also allows you to return to the previous screen in a data session
END/POWER Key 	Lets you turn the phone on or off, end a call, or cancel your input and return to standby mode.
Keypad	Lets you enter numbers, letters, and characters, and perform functions.
Call List Button	Lets you display the recent call history, end a call, or unlock the keypad.
External Speaker Button	Lets you place or receive calls in speakerphone mode, turn the speakerphone on and off during a call or activate Automatic Speech Recognition (ASR).
Camera Lens	As part of the built-in camera, lets you take pictures and videos.

Part	Description
Secondary Microphone	Suppresses background noise improving audio quality for the other party during voice calls except in speakerphone mode.
Flash	Allows you to take pictures or record videos in low light situations. It can also work as a flashlight. See Flashlight .
Direct Connect Button (DC Button)	Allows you to make Direct Connect calls, send Call Alerts, and view Direct Connect call history. See Sprint Direct Connect .
Outer Screen	Displays information such as the call status, the date and time, and the signal and battery strength.
USB/Charging Port	Allows you to connect the phone and the USB cable for use with the charger adapter or other compatible accessories.
Speaker	Lets you hear the different ringtones and sounds. The speaker also lets you hear the caller's voice in speakerphone mode.
Headset Jack	Allows you to plug in an optional headset for convenient, hands-free conversations.
microSD Card Slot (internal)	Holds an optional SD card to support external memory. The SD compartment is behind the battery. See Insert SD Card .
SIM Card Slot (internal)	Holds the SIM card. The SIM compartment is behind the battery. See Insert SIM Card .
Battery Cover Screw	Opens the battery cover to replace the battery.
Internal Antenna	Facilitates reception and transmission. To maximize performance, do not obstruct while using the phone.

Call Using the Phone Keypad

The most "traditional" way to place a call is by using the phone's keypad.

1. Enter a phone number from standby mode. (If you make a mistake while dialing, press  to erase the numbers.)
2. Press  or the external speaker button.
3. Press  when you are finished.
 - ❖ The call ends.

Text and Multimedia Messaging

With text messaging (SMS), you can send and receive instant text messages between your wireless phone and another messaging-ready phone.

Multimedia messages, or MMS, can contain text and pictures, recorded voice, audio or video files, contact cards (vCard), appointments (vCalendar), or any combination of these.

Send a Message

Quickly compose and send text messages on your phone.

1. Press  > **Messaging**.

Tip: For a shortcut, press **MESSAGING** (left softkey) in standby mode.

2. Select **Send Message**.
3. Select a recipient from the list or from the following options:
 - **Go to Contacts** to select a recipient from your Contacts. (Qualifying Contacts entries must contain a phone number or an email address.)
 - **New Address** to enter a recipient's phone number or email address directly. Press **CONTINUE** (left softkey) to proceed.
 - **MULTIPLE** (left softkey) to select multiple recipients. Press **CONTINUE** (left softkey) when you have finished selecting and entering recipients. (You may include up to 60 recipients per message.)
4. Compose a message.
 - Press **OPTIONS** (right softkey) to select additional options.
5. To add an attachment, select <**Add Attachment**>. You can choose from **Picture**, **Video**, **Voice**, **Audio**, **Contact (vCard)**, **Event (vCalendar)**, or **File Manager**.
6. Review your message and press **SEND** (left softkey).

If you are needing additional assistance with your device please give us a call at 1.855.204.3667.