


LG LS855 Marquee User Guide

Your LG Marquee™

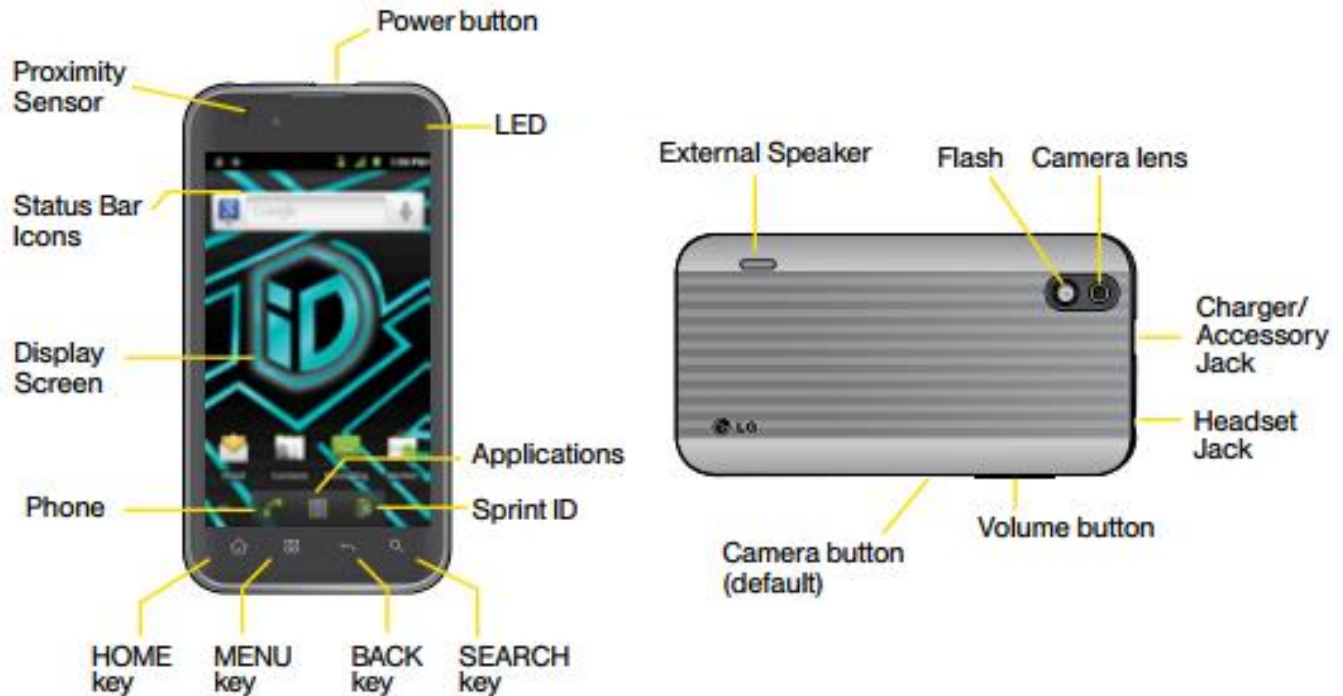

Buttons and Keys

LG Marquee™ Buttons and Keys

The bottom front of your device contains a row of four static keys that let you perform specific functions. Above the buttons, there is a program-dependent row of keys (they're always available from the unlocked Home screen).

- **Home Key** (🏠) – Press to return to the main Home screen.
- **Menu Key** (☰) – Press to open context-specific menus.
- **Back Key** (←) – Press to return to the previous screen view.
- **Search Key** (🔍) – Press to launch a search within the current screen or application.
- **Phone Button** (📞) – Tap to open the phone screen.
- **Applications Button** (📑) – Tap to display the applications list.
- **Sprint ID Button** (📶) – Tap to add, remove, and switch between ID packs.

Make and Answer Calls

Make a Phone Call

1. If the screen is locked, drag (🔒) to the right side of the screen.
2. Press (📞) and tap (📞) Phone.
3. Tap the digits of the number you want to call on the phone keypad. (The number will appear just above the keypad as you enter it. Tap (⌫) to delete one or more digits.)
4. Tap (📞).

Answer an Incoming Call

- Drag (📞) to the right on the screen.

Send a Call Directly to Voicemail

- Drag (📞) to the left.

Mute the Ringer on a Call

- To mute the ringer:
 - Press the volume button on the left side of the phone.

Messaging

Send a Text Message

1. Press (📧) and tap (☰) > Messaging (📧).
2. Tap **New message**, or press (📧) and tap **Compose**.
3. Enter a phone number, email address, or contact name in the To: field. (If the device recognizes a contact, you'll see a list. Touch the contact to complete the address.)
4. Tap **Type** to compose and then type your message.
5. When you are finished, tap **Send**.

Send a Picture or Video Message (Multimedia Messaging)

1. Follow steps 1 – 4 for sending a text message.
2. Press (📧) and tap **Attach**.
3. Tap a media type (such as Pictures, Videos, Audio, etc.) and then tap an available album.
4. Tap a picture or clip to select it. (For Audio, tap **OK**.)
5. If you are satisfied with your message, tap **Send MMS**.

Web

Find sports scores, news, and weather. Shop online. versions of your favorite websites.

Go Online

1. Press (🌐) and tap (☰) > **Browser**.
2. From the Sprint home page, select categories, navigate to websites, read blogs, download content, and more.
 - Tap a category to open it.
 - For more options, press (☰) from any page. Options may include **New window**, **Bookmarks**, **Windows**, **Refresh**, (or **Stop**) and **Forward**. Tap **More** for additional options including **Add bookmark**, **Find on page**, **Select text**, **Page info**, **Share page**, **Downloads**, and **Settings**.
 - To scroll, slide your finger up or down the page.
 - To zoom in or out, pinch the screen.

Email

Your device's Email applications let you access and manage multiple email accounts simultaneously in one convenient location. Although there is a separate Gmail application, the main email application can manage both Internet-based email services (Gmail™ and Yahoo™) and Corporate Work Email (Outlook®). The device can also be manually configured to connect to other email systems.

Set Up a Gmail Account

1. Press (📧) and tap (☰) > **Gmail** (📧).
2. Follow the instructions to set up or sign in to a Gmail account.

Note: Although you need a Gmail account to use certain features such as Android Market, you do not have to use Gmail as the default account for your device.

If you are needing additional assistance with your device please give us a call at 1.855.204.3667.