

LG Optimus Slider LS700

User Guide

Phone Overview

Front View







Rear View




Quick Keys


The Quick Keys are located at the bottom of the Home screen and Apps screen.

- : Opens the **Phone** application which displays the dialpad so you can dial an unsaved number. It also provides additional tabs to access Call log, Contacts, and your Groups.
- : Opens your **Contacts** list. You can also access the Phone application, log, and your Groups by touching the tabs across the top of the screen.
- : Opens the **Messaging** application.
- : Opens the **Apps** screen and displays applications.

Turning the phone on

- ▶ Press and hold the **Power/Lock Key**  for a couple of seconds until the screen turns on.


Turning the phone off

1. Press and hold the **Power/Lock Key**  until the pop-up menu appears.
2. Touch **Power off** in the pop-up menu.
3. Touch **OK** to confirm that you want to turn off the phone.




Placing and Ending Calls

You can place calls using the **Phone** application. Calls can be manually dialed using the **Phone** tab. You can also dial from your phone's memory using the **Call log** tab, the **Contacts** tab, or the **Groups** tab.



To open the Phone application

- ▶ From the Home screen, touch the **Phone Key**  in the Quick Keys bar.

To place a call by dialing

1. Open the **Phone** application.
2. Touch the keys on the dialpad to manually enter a phone number.
 - If you enter a wrong number, touch the **Delete Key**  to erase digits one by one.
 - To erase the entire number, touch and hold the **Delete Key** .
 - To dial an international number, touch and hold the **0+** key to enter the plus (+) symbol. Then, enter the international prefix for the country; followed by the full phone number.
3. Touch the **Call Key**  to dial the number that you entered.

To decline a call and divert it to voicemail



- ▶ If the screen is unlocked, simply touch the **Ignore button** .
- ▶ If the screen is locked, slide the **Ignore button**  to the left.
- ▶ The caller is sent directly to your voicemail box to leave a message.

Browse web pages

Touch the **Apps Key**  > **Browser** . To access a specific web page, touch the URL input field, enter the web address (URL) of the web page, and touch .



To turn Wi-Fi on and connect to a Wi-Fi network

 
1. Touch the **Apps Key**  > **Settings**  > **Wireless & networks** > **Wi-Fi settings**.
2. If the **Wi-Fi** box is not checkmarked, touch **Wi-Fi** to turn it on and scan for available Wi-Fi networks.
3. Touch a network to connect to it.
 - If the network is open, you will be prompted to confirm that you want to connect to that network by touching **Connect**.
 - If the network is secured, you will be prompted to enter a password
 - When you're connected to a network, you can touch the network name in the Wi-Fi settings screen for details about the speed, security, address, and related settings.

To send a text message

1. On the **Messaging** screen, touch **New message**.
2. Enter a mobile phone number in the **To** field.


 

As you enter the mobile phone number, matching contacts appear. You can touch a suggested recipient or continue entering the phone number.
3. Touch the text field to start entering your message.

A counter is displayed in the top right corner of the text field to tell you how many characters are left.

If you press the **Back Key**  while composing a message, it's saved as a draft in your **Messaging** application. Touch the message to resume composing it.
4. Touch the **Send** button to send the message.

Your message is displayed and responses appear in the same window, creating a message thread with that contact.

To add a new contact

1. Open the **Contacts** application.
2. Press the **Menu Key**  and touch **New contact**.
3. If you have more than one account with contacts, touch **Contact type** at the top of the screen and choose the account to which you want to add the contact.
4. Enter the contact's name.
5. Touch a category of contact information, such as phone number or email address, to enter that kind of information about your contact.
6. Touch a category's plus button  to add more than one entry for that category. For example, in the phone number category, add a work number and a home number. Touch the label button to the left of the entry item information to open a drop-down menu of preset labels. For example, **Work** and **Home** for phone numbers.
7. Touch the **Picture frame** icon  to select a picture to display next to the name in your list of contacts and in other applications.
8. When you're finished, touch the **Save** button.

If you are needing additional assistance with your device please give us a call at 1.855.204.3667.