

# Samsung M260 Factor User Guide

## Your Phone





## Key Functions

1. Status Bar Icons provide information about your phone's status and options, such as signal strength, ringtone setting, messaging, and battery charge.
2. Display Screen displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the greeting.
3. Navigation Key scrolls through the phone's menu options and acts as a shortcut key from standby mode.
4. Softkey (left) lets you select softkey actions or menu items corresponding to the bottom left and bottom right lines on the Display Screen.
5. Camera Key lets you activate the camera and take pictures.
6. TALK Key allows you to place or receive calls, answer Call Waiting, use 3-Way Calling, or activate Voice Dial.
7. Keypad lets you enter numbers, letters, and characters, and select menu items. Press and hold keys for speed dialing.
8. Microphone allows other callers to hear you clearly when you are speaking to them.
9. Speaker Key to route the phone's audio through the speaker or through the earpiece.
10. END/POWER Key lets you turn the phone on or off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to mute the ringtone or ignore the call.
11. Back Key deletes characters from the display in text entry mode. When in a menu, pressing the Back key returns you to the previous menu, closes a dialog box, or exits an onscreen menu/option.
12. Softkey (right) lets you select softkey actions or menu items corresponding to the bottom left and bottom right lines on the Display Screen.
13. MENU/OK lets you access the phone's menus and selects the highlighted choice when navigating through a menu.
14. Earpiece/Speaker lets you hear the caller and automated prompts.
15. Camera contains the hardware enabling you to capture pictures.

16. Volume Buttons allows you to adjust the ringtone volume in standby mode (with the phone open) or adjust the voice volume during a call. The volume button can also be used to scroll up or down to navigate through the different menu options.
17. Charger/Accessory Jack allows you to connect the phone charger or an optional USB cable.
18. Camera Button lets you activate the camera.

## Viewing the Display Screen

Your phone's display screen provides information about your phone's status and options. This list identifies the symbols you'll see on your phone's display screen:

*Tip:* To view a list of your phone's icons and descriptions, from the main menu select Settings/Tools > Settings > Phone Information > Icon Glossary.

## Turning Your Phone On and Off

### Turning Your Phone On

- ▶ Press **power**.

Once your phone is on, it may display "Searching..." When your phone finds a signal, it enters standby mode – the phone's idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Boost service by pressing any key (when your phone is turned on).

*Tip:* The Power Save feature conserves your battery power when you are in an area where there is no signal.

### Turning Your Phone Off

- ▶ Press and hold **power** for two seconds until you see the powering-down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

### Making Calls

1. Enter a phone number from standby mode. (If you make a mistake while dialing, press **back** to erase the numbers.)
2. Press **power**.
3. Press **power** or close the phone when you are finished.

*Tip:* To redial your last outgoing call, press **power** twice.

To redial other recent numbers, press **power**, highlight a number, and press **power** again.

If you are needing additional assistance with your device please give us a call at 1.855.204.3667.