


Samsung Galaxy Discover R740 User Guide

Front View




- 1. Earpiece:** Use during calls to listen to callers.
- 2. Menu Key:** Press to display options for the current screen.
- 3. Microphone:** Use during calls to allow callers to hear your voice, and when recording.
- 4. Home Key:** Press to display the Home screen, or Lock screen if the phone is locked. Press and hold to display recent applications.
- 5. Back Key:** Press to return to the previous screen or option.
- 6. Proximity Sensor:** Detect the presence of nearby objects to control device functions or blank the screen display, such as when you hold the phone to your ear during a phone call.

Side Views

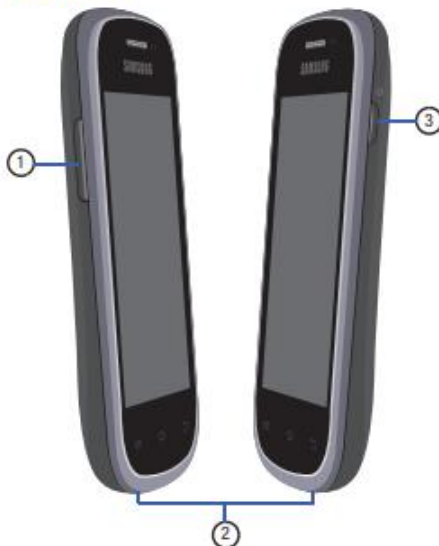










- 1. Volume Key:** From the Home screen, touch to adjust Master Volume. During calls or music playback, press to adjust volume. Press to mute the ringtone of an incoming call.
- 2. USB Power/Accessory Port:** Connect a USB cable for charging or to sync music and files.
- 3. Power/Lock Key:** Press and hold to turn the phone on or off. Press to lock the phone, or to wake the screen for unlocking.




Turning Your Phone On

- Press and hold the  **Power/Lock** key (on the upper right side of the phone) for three seconds. While powering on, the phone connects with the network, then displays the Locked screen and any active Notification alerts.





Adding Contacts

1. From the Home screen, touch  **People** →  **People list** →  **Add a contact**.
 - If you have defined accounts (Google, Samsung, and so on), the **Save contact to** pop-up appears. Select **Phone** or the account to receive the new Contact entry.
 - If you have not defined any accounts, the **Save contact** pop-up appears. The following options are available:
 - **Keep local**: Saves your contacts in "my device contacts".
 - **Add account**: Lets you define an account to which your device will save your contacts. The **Add new account** screen appears.
2. Touch contact fields to select or enter information:
 - Touch  **Photo ID** to choose a picture to identify the contact.
 - Touch **Name** to enter a name for the contact. Touch  to enter **Name prefix**, **First name**, **Middle name**, **Last name**, or **Name suffix**.
 - Touch **Add organization** to enter a **Company** name and **Title** for this contact.
 - Touch **Phone** to enter a phone number, then touch  to choose a label: **MOBILE**, **HOME**, **WORK**, **WORK FAX**, **HOME FAX**, **PAGER**, **OTHER**, **CUSTOM**, **CALLBACK**, **CAR**, **COMPANY MAIN**, **ISDN**, **MAIN**, **OTHER FAX**, **RADIO**, **TELEX**, **TTY TDD**, **WORK MOBILE**, **WORK PAGER**, **ASSISTANT**, or **MMS**. To add another number, touch **Add new**.
 - Touch **Email** to enter an address, then touch  to choose a label: **HOME**, **WORK**, **OTHER**, **MOBILE**, or **CUSTOM**. To add another number, touch **Add new**.
 - Touch **Address** to enter an email address, then touch  to choose a label: **HOME**, **WORK**, **OTHER**, **MOBILE**, or **CUSTOM**. To add another number, touch **Add new**.
 - Touch **Date** to enter an event, then touch  to choose a label: **BIRTHDAY**, **ANNIVERSARY**, **OTHER**, or **CUSTOM**. To add another number, touch **Add new**.
 - Touch **Group name** to assign the contact to a group.
 - Touch **Add another field** to add more fields, including **Phonetic Name**, **IM**, **Notes**, **Nickname**, **Website**, **Internet call**, or **Relationship**.
3. When you finish selecting and entering information, touch **DONE**.

Making Calls Using the Phone Keypad


1. From the Home screen, touch  **Phone**, then touch the  **Dialer** tab (top left of the screen).
2. Touch the digits of the telephone number on the **Keypad**.
3. Touch  **Send** (bottom center of the Dialer screen) to place the call.

Creating and Sending Messages

1. From the Home screen, touch  **Messaging** →  **New message**.
2. Touch **To** and enter a name, phone number, or email address. As you enter text, matching contacts display. Touch a contact to add it to the list.
3. Touch **Type message**, then enter the message text. The following options are available (which options are available depends on whether you include an attachment):
 - Touch  **Attach** to add a Picture, Capture picture, add Videos, Capture video, add Audio, Record audio, or add a Slideshow.
 - Touch  **Menu** for options:
 - **Add subject**: Add a subject field (converts the message to MMS.)
 - **Send**: Send your current message.
 - **Insert smiley**: Add a text emoticon to the message.
 - **Delete thread**: Delete the current conversation.
 - **Add to People**: Create a new contact for this number or address.
 - **Settings**:
4. Touch  to send the message.

Browser

Your phone is equipped with a full HTML Browser, which allows you to access the internet.

- From the Home screen, touch  **Browser**. Your Wireless Provider's mobile home page displays.



Navigating the web

Selecting items on a page

While browsing web pages, use gestures and menus to navigate:

- Touch an item to select it.
- Touch a hyperlink to follow the link.
- Touch and hold on a hyperlink for options.

Command Keys

- Touch  **Back** to return to the previous page.
- Touch  **Menu** → **Forward** to advance to the next page.

Touching and dragging

- Touch and drag your finger on the screen to navigate pages, and to reposition pages within the screen.



 
Entering text in a field

- While browsing, touch a text field to display the on-screen QWERTY keyboard and enter text.

Zoom

Note: Some web pages do not support the Zoom function.

Taking Pictures

1. From the **Apps** screen, touch  **Camera**.
2. Before taking the photo, touch  to access various camera options and settings.
3. Using the display as a viewfinder, compose your picture by aiming the lens at the subject.
4. Touch the **Camera** button () to take the picture. If no memory card is installed, all pictures are stored on the Phone.

If you are needing additional assistance with your device please give us a call at 1.855.204.3667.