


Samsung M300 User Guide









Key Functions

1. **Speaker** allows you to hear the other caller and the different ring tones or sounds offered by your phone.
2. **Display Screen** displays all the information needed to operate your phone, such as the call status, the contacts, the date and time, and the signal and battery strength.
3. **Navigation Key** scrolls through the phone's menu options and acts as a shortcut key from standby mode.
 - Press **Up** to access **Missed Alerts**.
 - Press **Down** to access **My Content**.
 - Press **Left** to launch **Send Message**.
 - Press **Right** to launch **Web**.
(Keys can be reassigned to create customized shortcuts.)
4. **Left Softkey** allows you to select softkey actions or menu items corresponding to the bottom left line on the display screen.
5. **TALK Key** allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Voice Dial.
6. **Voicemail Key** allows you to quickly access your voicemail. Press and hold this key for two seconds to automatically dial your voicemail's phone number.
7. **Numeric Keypad** allows you to enter numbers, letters, and characters.
8. **Shift/Asterisk Key** enters the asterisk [*] character for calling features. In the text entry mode, press this key to change the capitalization mode.
9. **Microphone** allows other callers to hear you clearly when you are speaking to them.
10. **Plus Code Dialing Key** automatically dials the international access code for the country in which you are located (for instance, 011 for international calls placed from the United States).
11. **Space/Pound Key** enters the pound [#] character for calling features. In the text entry mode, press this key to enter a space.
12. **BACK (Clear) Key** deletes characters from the display while in text entry mode. When in a menu, press the BACK key to return to the previous menu. This key also allows you to return to the previous screen in a Sprint Vision session.
13. **END (Power) Key** ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the main menu, it returns the phone to standby mode and then cancels your input. When you receive an incoming call, press this key to enter silent mode and mute the ringer.
14. **Right Softkey** allows you to select softkey actions or menu items corresponding to the bottom right line on the display screen. It also provides quick access to your phone contacts list.
15. **Menu/OK Key** allows you to access the menu screen. It also allows you to accept choices offered when navigating through a menu.

Making Calls


Placing a call from your phone is as easy as making a call from any landline phone. Just enter the number, press , and you're on your way to clear calls.

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number from standby mode.
(If you make a mistake while dialing, press  to erase one digit at a time. Press and hold  to erase the entire number.)
3. Press . (To make a call when you are roaming and Call Guard is enabled, press  and then . See "Using Call Guard" on page 97.)
4. Press  or close the phone when you are finished.

Answering Calls

To answer an incoming call:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press  to answer an incoming call. (Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any number key. See "Call Answer Mode" on page 79 for more information.)

Your phone notifies you of incoming calls in the following ways:

- The phone rings and/or vibrates.
- The backlight illuminates.
- The screen displays an incoming call message.


 

 



If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number may also be displayed, if available.

If Call Answer is set to **Talk Key**, the following options are also displayed. To select an option, press the corresponding softkey button.

- **Answer** to answer the call.
- **Ignore** to send the call to your voicemail box.

Composing SMS Text Messages

To compose an SMS Text message:

1. Select **Menu** > **Messaging** > **Send Message** > **Text Message**.
2. Select **Contacts**, **Mobile #**, or **Email** and press .
3. Enter the number, email address, or select the contact, and select **Next** (). (You may include up to 10 recipients per message.)
4. Compose a message using one of the following methods:
 - To type a message, use your keypad to enter your message. Select **Options** () to select a character input mode.
 - To use a preset message, recent message, or an emoticon, select **Options** () and select **Preset Msg**, **Recent Msg**, or **Emoticons**. Press the number on the keypad that corresponds to the number next to the message or emoticon.
5. Select **Next** (.
6. Review your message and select **Send** (). You may also select the following additional messaging options by selecting **Options** ():
 - **Edit** to edit the existing message before sending.
 - **Priority** to set the message priority level [**Normal** or **Urgent**].
 - **Call Back #** to set the callback number.
 - **Delivery Rec.** to set the phone to notify you when the message has been received by the recipient.
 - **Save to Drafts** to save the message without sending.

If you are needing additional assistance with your device please give us a call at 1.855.204.3667.