

Samsung M360 User Guide

Your Phone



Key Functions

1. **Status Bar Icons** provide information about your phone's status and options, such as signal strength, roaming, ringer setting, messaging, and battery charge.
2. **Display Screen** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the greeting.
3. **Navigation Key** scrolls through the phone's menu options and acts as a shortcut key from standby mode.
4. **Softkeys** let you select softkey actions or menu items corresponding to the bottom left and bottom right lines on the Display Screen.
5. **TALK Key** allows you to place or receive calls, answer Call Waiting, use 3-Way Calling, or activate Voice Dial.
6. **Keypad** lets you enter numbers, letters, and characters, and select menu items. Press and hold keys for speed dialing.
7. **Microphone** allows other callers to hear you clearly when you are speaking to them.
8. **BACK/Clear Key** deletes characters and numbers from the display in text entry mode. When in a menu, pressing the Back key returns you to the previous menu. This key also allows you to return to the previous screen in a data session.
9. **END/POWER Key** lets you turn the phone on or off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to mute the ringer or ignore the call.
10. **MENU/OK** lets you access the phone's menus and selects the highlighted choice when navigating through a menu.
11. **Earpiece/Speaker** lets you hear the caller and automated prompts.
12. **Volume Buttons** allows you to adjust the ringer volume in standby mode (with the phone open) or adjust the voice volume during a call. The volume button can also be used to scroll up or down to navigate through the different menu options.
13. **Camera** contains the hardware enabling you to capture pictures.
14. **Headset Jack** allows you to plug in either a stereo headset (included) or an optional headset for convenient, hands-free conversations.
15. **Camera Button** lets you activate the camera.

Making Calls

1. Enter a phone number from standby mode. (If you make a mistake while dialing, press **END** to erase the numbers.)
2. Press **CALL**. (To make a call when you are roaming and Call Guard is enabled, highlight Roam Call and press **CALL**. See "Call Guard" on page 80.)
3. Press **END** or close the phone when you are finished.

Answering Calls

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press **CALL** to answer an incoming call. (Depending on your settings, you may also answer incoming calls by opening the phone or by pressing any number key. See "Call Answer Mode" on page 37 for more information.)

Your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The indicator light flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. You may also see the caller's phone number, if available.

If you set **CALL ANSWER** to **Talk Key**, you also see the following options. To select an option, press the corresponding softkey.

Composing Text Messages

1. Press **MESSAGES** > **Messages** > **Send Message**.

To select a single recipient:

- ▶ Highlight a contact from the **Go to Contacts** list and press **SELECT**.

– or –

Press **NEW ADDR** (right softkey) to enter new recipient information.

To select multiple recipients:

1. Press **MULTIPLE** (left softkey) to select multiple contacts.
2. Highlight an entry and press **SELECT**. Repeat the process for each entry in the list.
3. Press **CONTINUE** (left softkey).

To compose a message:

1. From a screen where you can enter text, press **OPTIONS** (right softkey) to change the text input mode.
2. Select one of the following options:
 - **Text Mode**
 - **Predictive Text** to enter text using a predictive text system that reduces the number of key presses required while entering a word.
 - **Abc** to use multi-tap entry – press **ABC** once for "a," twice for "b," three times for "c".
 - **123** to enter numbers by pressing the numbers on the keypad.
 - **Symbols** to enter symbols.
 - **Smileys** to enter "emoticons".
 - **Text Settings** to turn On or Off the following: Auto-Capital, Auto-Space, Dual Language, Word Choice List, Word Prediction, Word Completion, and Use My Words.
 - **Add Preset Message** to enter preprogrammed messages.

If you are needing additional assistance with your device please give us a call at 1.855.204.3667.