




Samsung M240

User Guide






Your Phone



Key Functions

1. **Status Bar Icons** provide information about your phone's status and options, such as signal strength, roaming, ringer setting, messaging, and battery charge.
2. **Display Screen** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
3. **Navigation Key** scrolls through the phone's menu options and acts as a shortcut key from standby mode.
4. **Softkeys** let you select left and right softkey actions or menu items corresponding to the bottom left and bottom right lines on the Display Screen.
5. **TALK Key** () allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Voice Dial.
6. **Keypad** lets you enter numbers, letters, and characters, and navigate within menus. Press and hold keys 0–9 for speed dialing.
7. **Microphone** allows other callers to hear you clearly when you are speaking to them.
8. **END/POWER Key** () lets you turn the phone on or off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to enter ignore/reject the call.
9. **BACK/Clear Key** deletes characters from the display in text entry mode. When in a menu, pressing  returns you to the previous menu. This key also allows you to return to the previous screen in a data session.
10. **MENU/OK** lets you access the phone's menus and selects the highlighted choice when navigating through a menu.
11. **Earpiece/Speaker** lets you hear the caller and automated prompts, as well as ringers and other sounds.
12. **Indicator LED** shows your phone's connection status at a glance. This illumination occurs above the external LCD.
13. **Volume Button** allows you to adjust the ringer volume in standby mode or adjust the voice volume during a call. The volume button can also be used to scroll up or down to navigate through the different menu options.
14. **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations. CAUTION! Inserting an accessory into the incorrect jack may damage the phone.
15. **Charger/Accessory Jack** allows you to connect the phone charger or an optional USB cable (not included). CAUTION! Inserting an accessory into the incorrect jack may damage the phone.

Making Calls




1. Open the phone (see "Your Phone" on page 8) to access the keypad.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press  to erase the numbers.)
3. Press . (To make an outgoing call when you are roaming and Call Guard is enabled, press  and then press . See "Call Guard" on page 88.)
4. Press  or close the phone when you are finished.

Ending a Call

- ▶ Press .



Adding a New Contacts Entry

Your phone can store up to 500 contact entries in total, with each contact entry containing a maximum of seven phone numbers for a total phone book capacity of 3500 numbers, and each entry's name can contain 64 characters.

1. Press  > **Contacts** > **Add New**.
2. Select **New Contact** to create a new Contacts entry.
3. Enter a name for the new entry and press the navigation key down. (See "Entering Text" on page 27.)
4. Enter the phone number for the entry and press .
5. Highlight a label for the entry (**Mobile**, **Home**, **Work**, **Pager**, **Fax**, or **Other**) and press .
6. Press **Done** (left softkey).

Text Messaging (SMS)

Composing Text Messages

1. Press  > **Messages** > **Send Message** > **Text Message**.
 - or –
 - Press **TEXT** (left softkey).
2. Select an existing Contact (**Go to Contacts**).
 - **Contacts** to select a recipient from your Contacts (qualifying Contacts entries must contain a wireless phone number or an email address).
 - or –
 - Press **New Addr** (right softkey) to manually enter either a phone number or email address.
 - **Phone Number** to use the keypad to enter a wireless phone number directly.
 - **Email Address** to enter the recipient's email address.
 - or –
 - Press **Multiple** (left softkey) to select more than one recipient and press .

If you are needing additional assistance with your device please give us a call at 1.855.204.3667.